English	1
Français	17
Deutsch	33
Español	49
Nederlands	65
Italiano	81
Português	97
Svenska	113

We hope you enjoy your hdd

Please visit www.philips.com/support
and enter your product name to view:

- FAQ, Frequently Asked Questions
- Latest user manuals
- Latest computer software downloads
- Firmware upgrade files

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/register so we can inform you as soon as new free upgrades become available.

The typeplate is at the back of the set.

Quick start

① Charge the battery

Connect the supplied multi-voltage adapter/charger to the 5V DC jack on hdd and the main power supply. Charge 1 hour for fast charge or 4 hours for 100% battery power. *(Battery life may vary according to use.)*

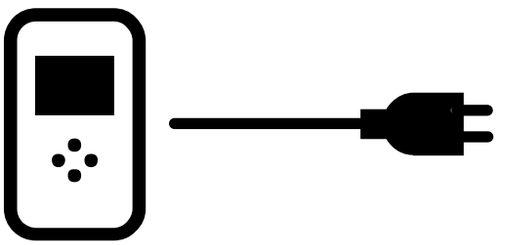

② Install music software

Insert the supplied CD into your PC's CD-ROM drive. Follow screen instructions to complete installation.

ATTENTION! WINDOWS 98 USERS:
To avoid installation problems, DO NOT CONNECT hdd to the PC until **AFTER** installation completes.

③ Connect your hdd and PC

Connect your hdd to your PC using the supplied USB cable, with hdd powered by supplied adapter. The USB connection screen will automatically appear.

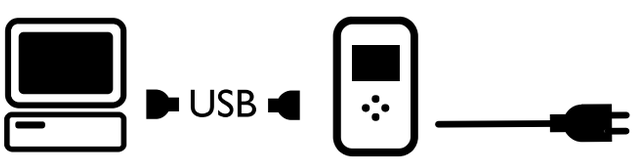

④ Organize and transfer music

Launch your music software from Windows desktop or Start menu.
Organize your music.
Transfer music files from your PC to your hdd.

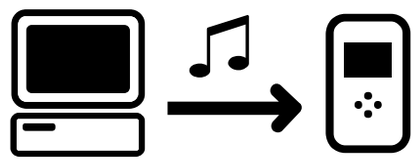

TIP

Detailed information is given in selected music software's **Help**.

⑤ Safely disconnect hdd

Exit your music software.
Disconnect hdd safely from your PC by clicking on the task bar to avoid file error.
(**WINDOWS 98SE users**: there is no icon.
Simply disconnect hdd after file transfer completes.)

⑥ Enjoy music on the go

Press and hold ▶II to switch on hdd.
Use scroll controls to browse and press ▶II to enjoy music!

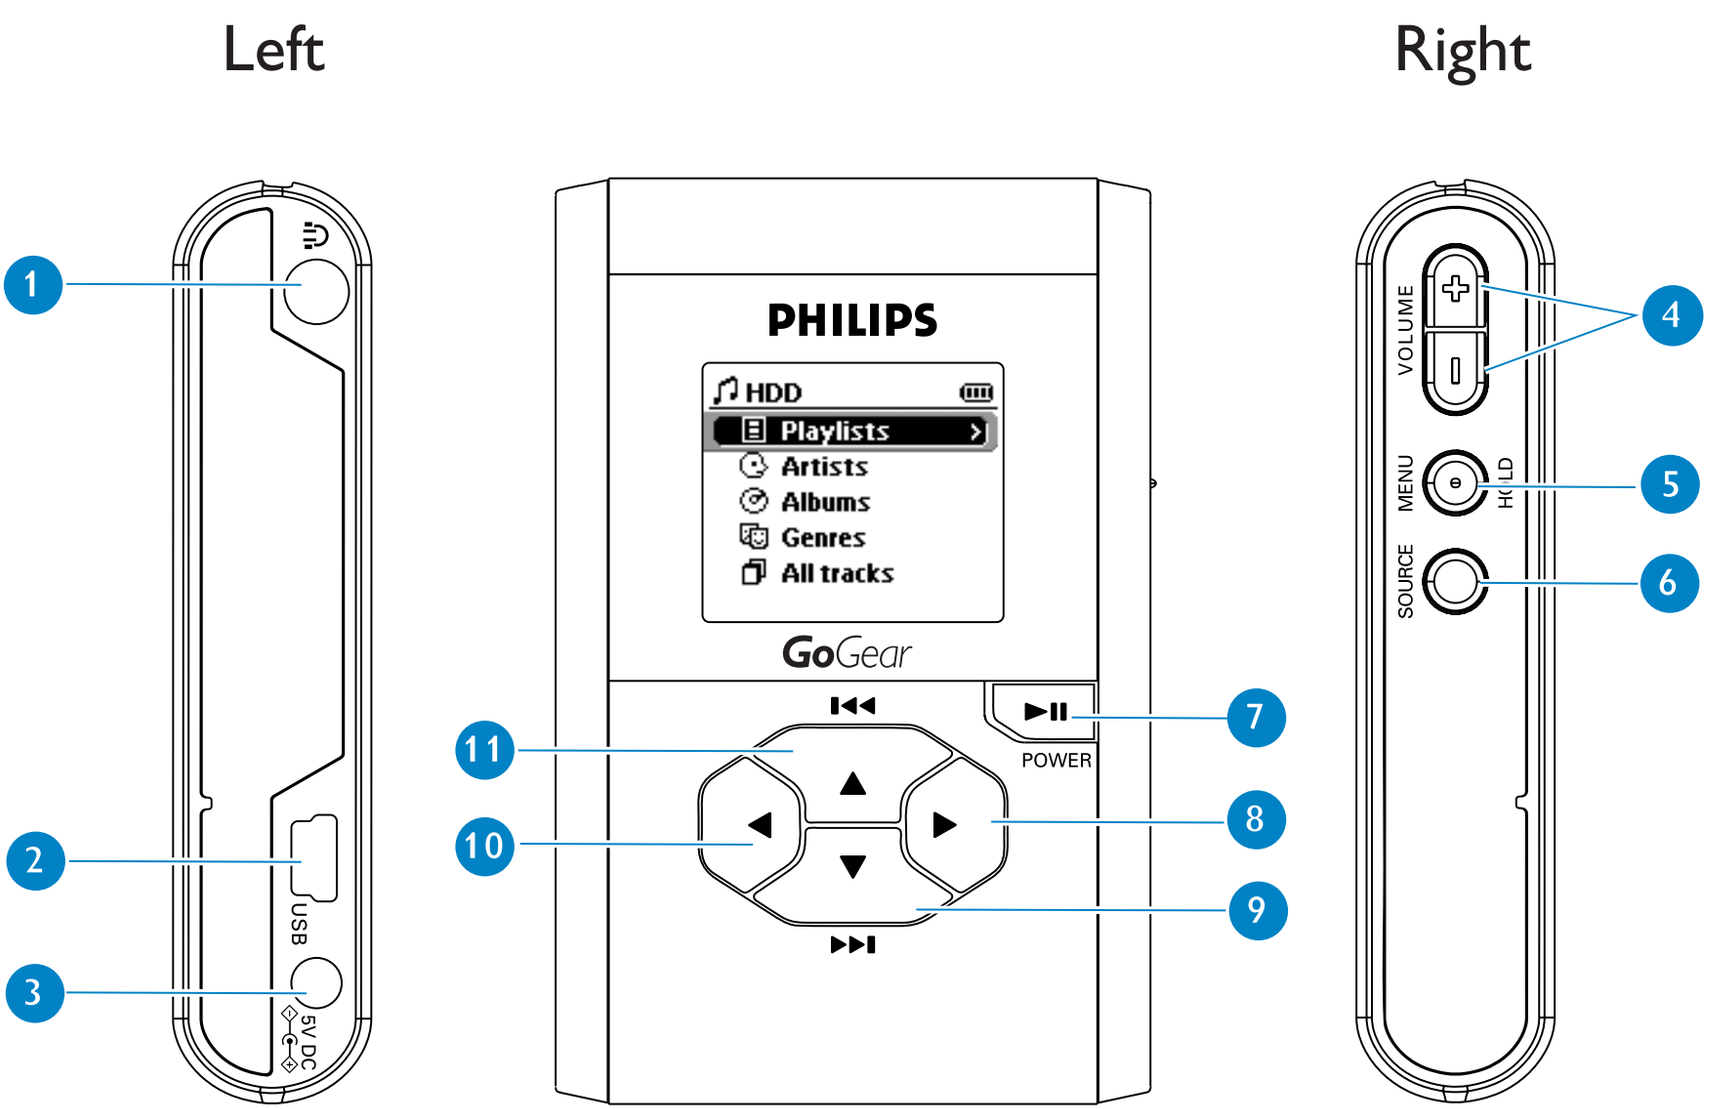
Left
Right
PHILIPS
HDD
Playlists
Artists
Albums
Genres
All tracks
GoGear
POWER
USB
5V DC
VOLUME
MENU
SOURCE
1
2
3
4
5
6
7
8
9
10
11

Overview of controls and connections

1	🎧	Headphones jack
2	**USB**	USB cable connector
3	**5V DC**	AC converter jack
4	**VOLUME + / –**	Volume control
5	**MENU/HOLD**	For menu options / key locking / preset tuning
6	**SOURCE**	For music library / Radio
7	▶II	On / Off and Play / Pause
8	▶	Right
9	▼ / ▶▶I	Next / Fast forward / SuperScroll™
10	◀	Left
11	▲ / I◀◀	Previous / Rewind / SuperScroll™

Music mode: playback

1. Press **SOURCE** and select **HDD** to enter the music mode.
2. Press ▲ to scroll up or ▼ to scroll down for your option.
   Press ▶ for next or ◀ for previous levels of library.
3. Press ▶II to play or pause your selection.

> **TIP**
>
> The ▶II, ▲ and ▼, keys are multi-functional. They work according to how you press them: press *halfway down*, press *down fully,* or press and hold.

Understanding hdd display

hdd has an intuitive display to show various information:			
	Battery level indicator		DC power connected
	Music mode		Radio mode
	Playlist		Album
	Genres		Artists
	All tracks		Equalizer (EQ)
<	Previous menu / library level available	>	Next menu / library level available
	Repeat once		Repeat all
	Shuffle	DBB	Dynamic Bass Boost selected
	Option available for selection		Option selected

Using hdd controls

Troubleshooting	Control to press
Reset hdd	Press and hold ▲ + [VOLUME +]
Restore hdd factory settings	Press MENU/HOLD; scroll to **Restore settings.** Press ▶ to confirm

Basic Operation	Controls to press
Switch hdd on / off	Press and hold ▶II
Call up library options	Press ◀ from the playscreen
Radio mode	Press SOURCE to select **Radio** from root menu
Lock keys / release locks on hdd	Press and hold MENU/HOLD
Go to different levels of menu	Press ▶ for next and ◀ for previous
Scrolling and browsing	▲, ▼, ◀, ▶ for up, down, left, right
Play music	Highlight selection and press ▶II
Pause music	Press ▶II during playback
Fast forward in a track	Press halfway down and hold ▼
Rewind in a track	Press halfway down and hold ▲
Change volume	Press VOLUME + / –
Play next or previous track	Press fully down ▼ for next and ▲ for previous
SuperScroll™	Press ▲ or ▼ fully down and hold

Customizing settings

1. Press **MENU/HOLD** for settings options. Press ▲ to scroll up or ▼ to scroll down for your option. Press ▶ for next or ◀ for previous levels of menu.
2. Press ▶ to confirm your selection by checking ○.
3. Press **MENU/HOLD** or ◀ to exit the menu display. Options for each setting are shown on hdd's display.

Advanced settings and actions	
Repeat / Shuffle	Play music tracks randomly (*Shuffle*) and / or repeatedly (*Repeat*)
DBB	Enable or disable **D**ynamic **B**ass **B**oost
Sleep timer	Set time to switch off hdd
Equalizer	Adjust sound settings
[>] key shortcut	Adjust ▶ key actions during playback (Default: Repeat & Shuffle)
Display	Adjust time for display to go dark and contrast level
Auto shutdown	Set time for switching off hdd automatically to save battery power
Language	Set hdd display language
Information	Display hdd information
Restore settings	Restore hdd factory settings in case of trouble shooting

Radio mode: Automatic tuning

(for radio models only)

1. Press SOURCE and select **Radio** to enter the radio mode.
   Any music playback will stop as you enter the radio mode.
2. Press MENU/HOLD and select **Autosearching** to automatically select the 10 strongest radio stations. Press any key to abort.
3. Press ▲ to scroll up or ▼ to scroll down for your preset.
4. Highlight your preset and wait for 2 seconds.
   You can now listen to the selected preset.

Radio mode: Manual tuning

(for radio models only)

1. Press SOURCE and select **Radio** to enter the radio mode.
   Any music playback will stop as you enter the radio mode.
2. Press ▲ to scroll up or ▼ to scroll down for your preset.
3. Press MENU/HOLD and select **Manual tuning**.
4. Press ▼ or ▲ to fine tune (tune step by step).
   Wait for 2 seconds to abort, or press ◀ to save your preset.

Using hdd as an external hard disk

hdd can be used as an external hard disk for storage and transfer of any data files. Note that music files transferred from the PC to hdd via Windows Explorer will not be able to play on hdd. Please always use by-packed music software for music transfer.

TIP

- During USB connection, we recommend that you always use the supplied power adapter to avoid loss of data.
- Always remove USB connection safely (*see Step 5, page 3*).

Environmental information

All redundant packaging has been omitted. We have done our utmost to make the packaging easily separable into four materials: cardboard, polystyrene foam, PET and polyethylene.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, exhausted batteries and old equipment.

Troubleshooting

If a fault occurs, first check the points listed in the following pages. For further help and other troubleshooting tips, please also check out hdd FAQ at www.philips.com/support. If you are unable to find a solution by following these hints, consult your dealer or service center.

WARNING:
Do not open the set as there is a risk of electric shock! Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

Q. My hdd does not respond.
Press and hold ▲ + **[VOLUME +]** to reset. File contents e.g. your songs or downloaded files on your hdd is not affected when resetting in this way.

Q. My hdd has short playback time.
Over time, the internal rechargeable battery will become weaker. It is replaceable. Please contact your nearest Philips Service Center for a battery replacement.

Q. My hdd shows this [file error] icon.
You have a file error: system files may be missing or there is a format error on hdd. To remedy, please connect hdd to your PC and to the main power supply and start DMM. The database will be recreated automatically.

Q. My hdd shows this [disk error] icon.
You have a serious error with your hdd, possibly caused by a faulty hard disk drive. Please consult your dealer or service center.

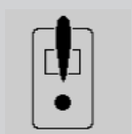

Q. How do I know which firmware version I have?
Scroll for **Menu ➔Settings ➔Information** to display "FW vers:".

Q. How do I know how much free space I have?
Scroll for **Menu ➔Settings ➔Information** to display "Free:". Otherwise, you can check this with DMM from the status bar.

Safety and maintenance

To get the most from your product, please also refer to the **Safety & Warranty** booklet supplied with this device for important safety instructions.

About operating and storage temperatures

- Operate hdd in a place where the temperature is always between 0 and 35° C (32 to 95° F).
- Store hdd in a place where the temperature is always between -20 and 45° C (-4 to 113° F).
- Battery life of hdd may shorten in low temperature conditions.
- **Do not expose to excessive heat** caused by heating equipment or direct sunlight.
- When you are using hdd, connecting it to your PC or charging the battery, it is normal for hdd to become warm. The rear panel case functions as a cooling surface that transfers heat from inside the unit to the cooler air outside.
- hdd is not recommended for using during vigorous exercising. hdd is **not shock-proof** and may be damaged when subjected to excessive vibrations.

Using your headphones

- **Hearing safety**
  Listen at a moderate volume. Using headphones at high volume can impair your hearing.
- **Traffic safety**
  Do not use while driving or cycling as you may cause an accident.
- **Optimizing playback performance**
  We recommend to only use PHILIPS headphones for hdd. Music volume and / or quality is not guaranteed for other non-PHILIPS headphones.

Avoiding damage or malfunction

- **Backup your files**. Please ensure that you retain the original files that you have down loaded to hdd. Philips is not responsible for any loss of content if the product becomes damaged or the hard disk not readable / legible.
- Manage (transfer, delete, etc.) your files only through by-packed music software to avoid problems!
- **Do not drop** hdd or allow objects to fall on hdd.
- **Do not allow** hdd to be submersed in **water**. Do not expose connection jacks to water as water entering the set may cause major damage.
- Clean hdd with a slightly damp cloth. Don't use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the finishing on hdd.
- Active mobile phones in the vicinity may cause interference to the device.

Using the power adapter / charger

- Use only the power adapter that came with hdd. Adapters for other electronic devices may look similar, but they may damage hdd.
- The only way to shut off power completely to your power adapter/charger is to disconnect it from the power source.
- Always leave space around your power adapter. Do not use this equipment in a location where airflow around the power adapter is confined, such as a bookcase.
- When connecting or disconnecting your power adapter, always hold the power adapter by its sides. Keep fingers away from the metal part of the plug.
- The power adapter for hdd is a high-voltage component and should not be opened for any reason, even when hdd is off.

Technical Specifications

System	
Output power	2 x 5mW (16 Ω)
Frequency response	20-20.000 Hz
THD	0.01%- 0.1%
Equalizer	5-band DSP controlled
USB Connection	USB2.0 full speed
Display	Black / White 128 x 96 pixels
Backlight	White LED
Battery	Replaceable (by Philips service) 750mAh Li-Ion
Lens	hardened optical glass
Encasing	Die-cast molded magnesium
Connections	Stereo headphone, Mini USB (B-type), DC charger input
Storage	Hard disk 1.0" micro HDD
Supported playback format	
MP3	8- 320 Kbps and VBR
WMA	32- 192 Kbps
Sample rates	8, 11.025, 16, 22.050, 32, 44.1, 48
ID3-tag support	Yes
PC Connectivity	USB2.0 full speed
File Transfer	via Windows Explorer of data in general
Music Transfer	via DMM / by-packed music software for music playback

Power supply
Built-in 750 mAh Lithium Ion (Li-Ion) rechargeable battery, replaceable by a Philips Service Center
Multi-voltage AC adapter/charger AY3192

Battery playtime
10 hours using built-in rechargeable battery (4 hours fully charged, fast charge: 1 hour)
Battery life may vary according to use.

Power Consumption
Shutdown: less than 1.3 mW
Average operational (USB mode): 1.45W
Average operational (play mode): 250mW

* It is not advised to run hdd on battery power during USB connection

Tuner Frequency range FM 87.5 - 108 MHz, 10 stations presets
(for radio models only)

General

Dimensions	54.3 (W) x 84.5 (L) x 18.3 (H) mm
	2.2 (W) x 3.4 (L) x 0.7 (H) inch
Weight	93g (3.3oz)

PHILIPS reserves the right to make design and specification changes for product improvement without prior notice.

Modifications not authorized by the manufacturer may void users authority to operate this device.

All trademarks and registered trademarks are the property of their respective owners.

All rights reserved.

Copyright information

- Unauthorized duplication and distribution of Internet/CD recordings violate copyright law and international treaties. You should use hdd and **PHILIPS Digital Media Manager** (DMM) software for personal use only.
- In the U.K and certain countries, the copying of material protected by copyright may require the permission of the copyright holders.

Notice for the USA

Note:
This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to **part 15** of the **FCC Rules**. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Notice for Canada:

This Class B digital apparaatus complies with Canadian ICES-003.

This product complies with the radio interference requirements of the European Union.

About Digital Media Manager (DMM)

Digital Media Manager contains all the necessary software components you need to work properly with your player. These include:

- playlist creation
- MP3 / WMA transfer for playback on player
- paths and supporting link for DMM software and player firmware upgrades.

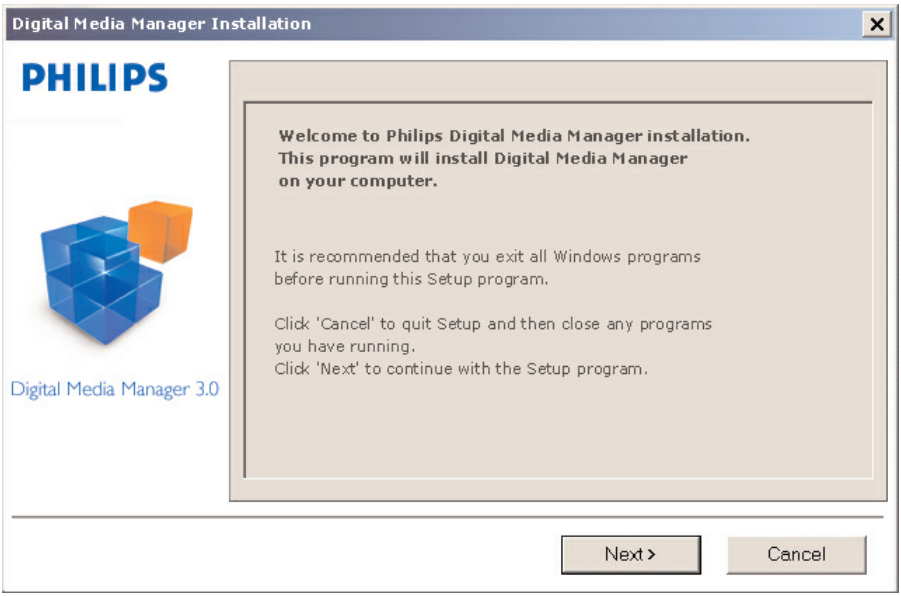
Digital Media Manager Installation
PHILIPS
Digital Media Manager 3.0
Welcome to Philips Digital Media Manager installation.
This program will install Digital Media Manager
on your computer.
It is recommended that you exit all Windows programs
before running this Setup program.
Click 'Cancel' to quit Setup and then close any programs
you have running.
Click 'Next' to continue with the Setup program.
Next >
Cancel

*Actual display varies with use

Install DMM

1. Insert the supplied CD into your computer's CD-ROM drive.
2. Follow screen instructions to begin and complete DMM installation.
3. Launch DMM to customize your settings when prompted to do so.

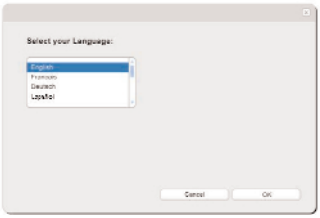

Select DMM's display language*

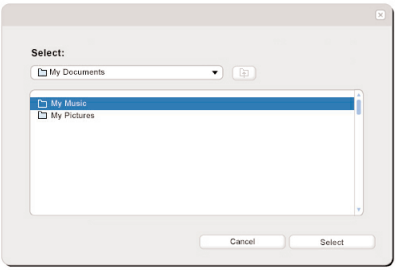

Specify one or more music folder*

*Actual display varies with use

Launch DMM (player connected)

1. Open the USB cover.
   Connect your player to your computer using the supplied USB cable.
   The USB connection screen will automatically appear.

TIP

Please refer to your computer's manual for the exact position of your USB port.
Look for the USB symbol on the processing unit of your computer.

2. Launch DMM.

3. Organize your music and playlists in DMM.

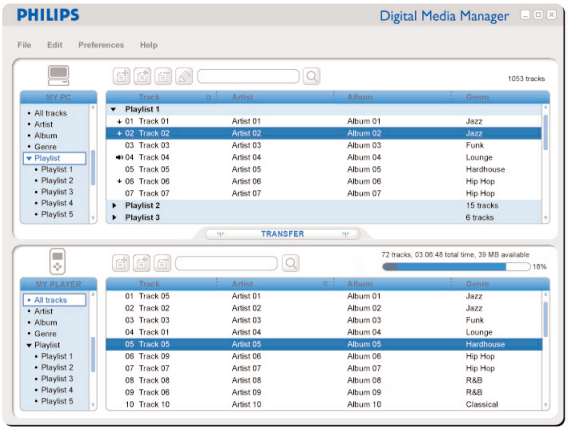

4. Transfer your music from DMM to your player.

*Actual display varies with use

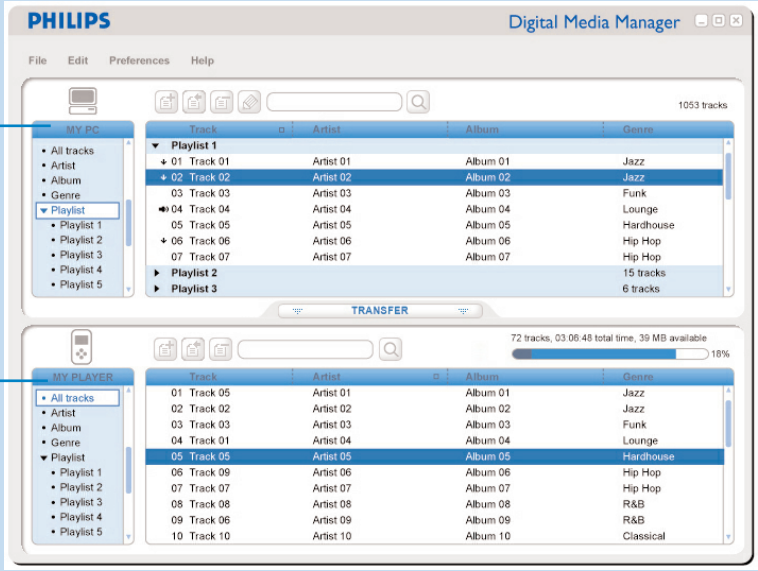

*Actual display varies with use

The mainscreen (player connected)

① **MY MUSIC**: displays the contents of your music folders; click on to minimize / maximize.

② **PLAYER MUSIC**: displays the contents of your player; click on to minimize / maximize.

New playlist: creates a new playlist.

Import music: adds music or playlist.

Trash: deletes selection.

Edit ID3 tag: edits track information of selected track.

Search: searches for music from **MY MUSIC** and / or **PLAYER MUSIC**.

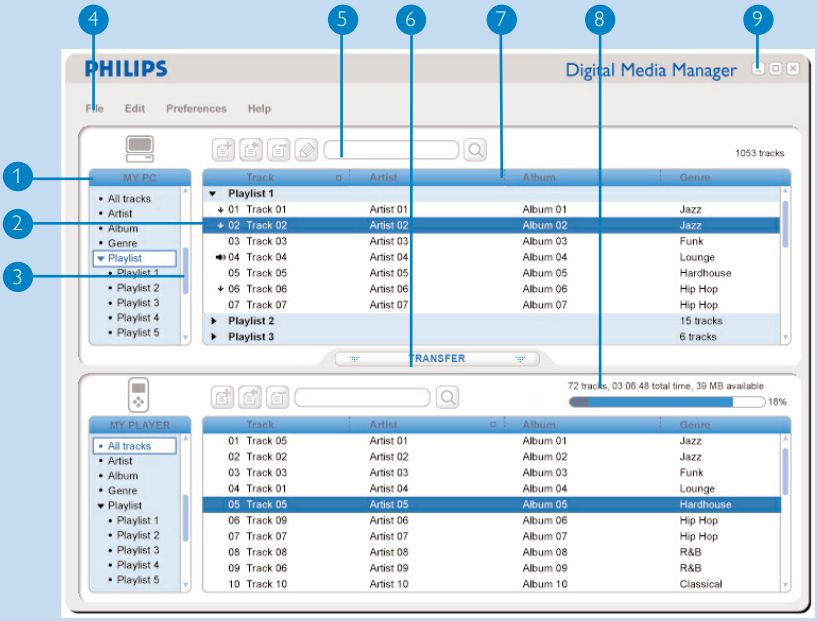

*Actual display varies with use

Selector panel and content panel

1. **Selector panel**: arranges the display order of the content panel.
2. **Content panel**: displays the contents of **MY MUSIC**, highlight to drag from **MY MUSIC** and drop to **PLAYER MUSIC.**
3. **Scroll bar**
4. **Pull down menus**
5. **Text area**: type your search criteria here.
6.

: transfers highlighted tracks and / or playlists.
7. **Header separator**: resizes column width.
8. **Memory indicator**: shows available memory.
9. **Resizing buttons**: minimizes, maximizes DMM view / exit DMM.

*Actual display varies with use

Indicators on the content panel

1. : expanded view, displays item contents in full.
2. : track / playlist not on the player.
3. Click to highlight an item.
   Press <Delete> on your keyboard to delete the highlighted item.
4. : indicates track is playing by DMM.
5. : collapsed view: item contains more contents to display.

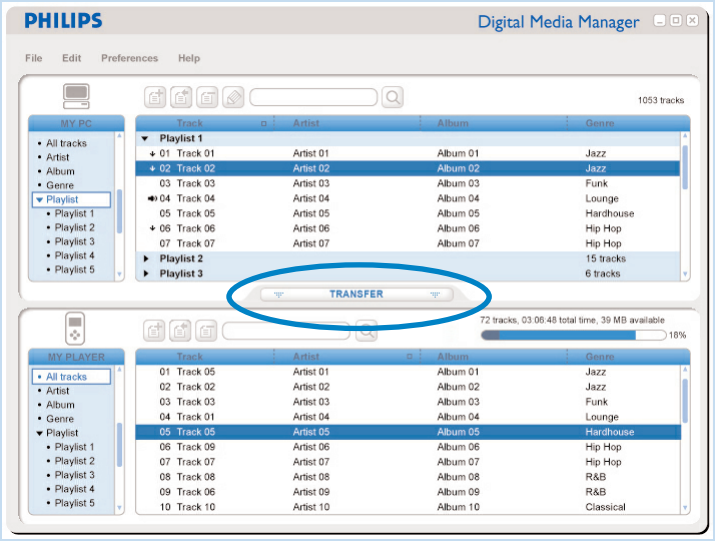
PHILIPS
Digital Media Manager
File
Edit
Preferences
Help
1053 tracks
MY PC
All tracks
Artist
Album
Genre
Playlist
Playlist 1
Playlist 2
Playlist 3
Playlist 4
Playlist 5
Track
Artist
Album
Genre
Playlist 1
01 Track 01 Artist 01 Album 01 Jazz
02 Track 02 Artist 02 Album 02 Jazz
03 Track 03 Artist 03 Album 03 Funk
04 Track 04 Artist 04 Album 04 Lounge
05 Track 05 Artist 05 Album 05 Hardhouse
06 Track 06 Artist 06 Album 06 Hip Hop
07 Track 07 Artist 07 Album 07 Hip Hop
Playlist 2 15 tracks
Playlist 3 6 tracks
TRANSFER
72 tracks, 03:06:48 total time, 39 MB available
18%
MY PLAYER
01 Track 05 Artist 01 Album 01 Jazz
02 Track 02 Artist 02 Album 02 Jazz
03 Track 03 Artist 03 Album 03 Funk
04 Track 01 Artist 04 Album 04 Lounge
05 Track 05 Artist 05 Album 05 Hardhouse
06 Track 09 Artist 06 Album 06 Hip Hop
07 Track 07 Artist 07 Album 07 Hip Hop
08 Track 08 Artist 08 Album 08 R&B
09 Track 06 Artist 09 Album 09 R&B
10 Track 10 Artist 10 Album 10 Classical

*Actual display varies with use

Click and Transfer

1. Make sure your player is connected when you launch DMM.
2. Click and highlight an item (e.g. track, artist, album, genre, playlist).
3. Click on

to copy your selection from your computer to your player.
4. Your selection is now transferred to your player.

TIP

Press and hold <Ctrl> on your keyboard and click to select more than one item. To select consecutive items, click the first item, press and hold <Shift> on your keyboard, and then click the last item.

IMPORTANT: KEEP A COPY OF YOUR ORIGINAL FILES!

Please keep a copy of the original files transferred to your player. Philips is not responsible for any loss of content if the player is damaged or not readable.

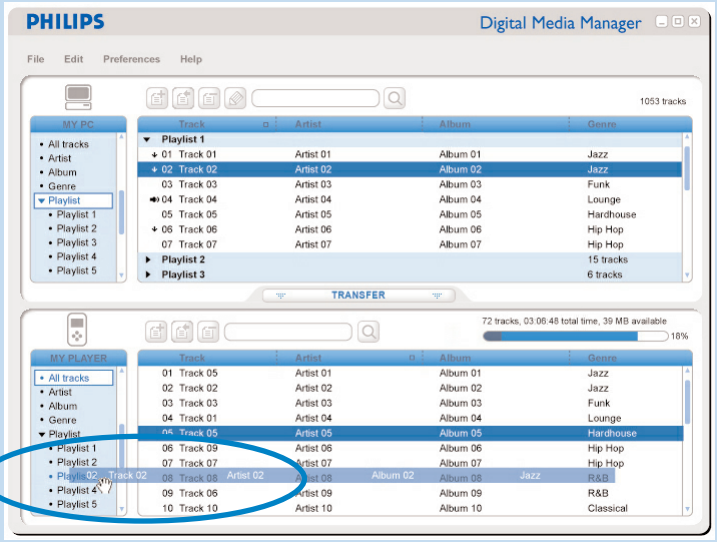
PHILIPS
Digital Media Manager
File
Edit
Preferences
Help
1053 tracks
MY PC
All tracks
Artist
Album
Genre
Playlist
Playlist 1
Playlist 2
Playlist 3
Playlist 4
Playlist 5
Track
Artist
Album
Genre
Playlist 1
01 Track 01 Artist 01 Album 01 Jazz
02 Track 02 Artist 02 Album 02 Jazz
03 Track 03 Artist 03 Album 03 Funk
04 Track 04 Artist 04 Album 04 Lounge
05 Track 05 Artist 05 Album 05 Hardhouse
06 Track 06 Artist 06 Album 06 Hip Hop
07 Track 07 Artist 07 Album 07 Hip Hop
Playlist 2 15 tracks
Playlist 3 6 tracks
TRANSFER
72 tracks, 03.06.48 total time, 39 MB available
18%
MY PLAYER
01 Track 05 Artist 01 Album 01 Jazz
02 Track 02 Artist 02 Album 02 Jazz
03 Track 03 Artist 03 Album 03 Funk
04 Track 01 Artist 04 Album 04 Lounge
05 Track 05 Artist 05 Album 05 Hardhouse
06 Track 09 Artist 06 Album 06 Hip Hop
07 Track 07 Artist 07 Album 07 Hip Hop
08 Track 08 Artist 02 Album 02 Jazz R&B
09 Track 06 Artist 09 Album 09 R&B
10 Track 10 Artist 10 Album 10 Classical

*Actual display varies with use

Drag and Drop to Transfer

1. Make sure your player is connected when you launch DMM.

2. Click to highlight an item (e.g. track, artist, album, genre, playlist). Drag the selection to **PLAYER MUSIC** or a specific playlist.

3. Your selection is now transferred to your drop destination.

TIP

Press and hold <Ctrl> on your keyboard and click to select more than one item. To select consecutive items, click the first item, press and hold <Shift> on your keyboard, and then click the last item.

IMPORTANT: KEEP A COPY OF YOUR ORIGINAL FILES!

Please keep a copy of the original files transferred to your player. Philips is not responsible for any loss of content if the player is damaged or not readable.

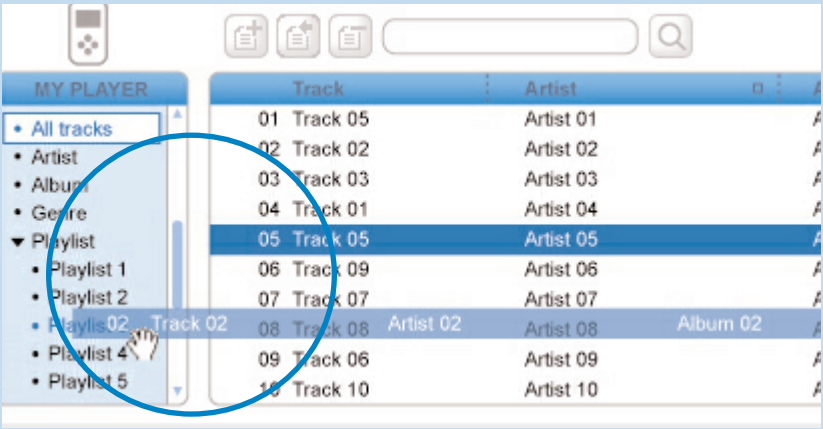

*Actual display varies with use

Add a Track to a Playlist by Drag and Drop

1. Click on a track.
2. Drag the selected track to a playlist.
3. Hold the mouse button and move your selection to a destination playlist.
4. Your selected track is now in the playlist.

TIP

Press and hold <Ctrl> on your keyboard and click to select more than one item. To select consecutive items, click the first item, press and hold <Shift> on your keyboard, and then click the last item.

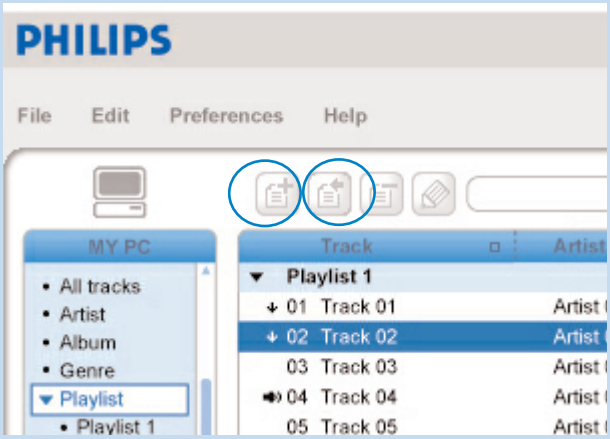

*Actual display varies with use

Create Playlists

1. Click on to create a new playlist.
2. Fill in the information in the pop up window.
3. Follow screen instructions to save your new playlist.
   You can now drag more tracks to the new playlist.

Import Playlists

1. Click on to import a new playlist.
2. Fill in the information in the pop up window.
3. Follow screen instructions to import your new playlist.
   You can now drag more tracks to the imported playlist.

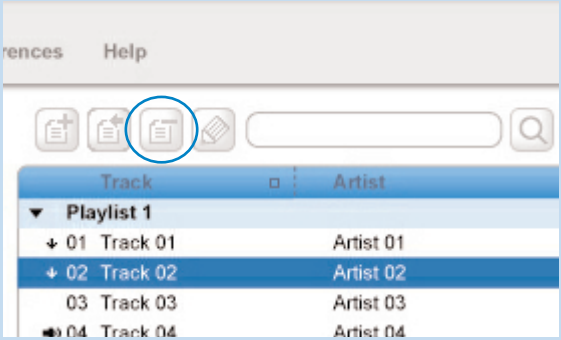

*Actual display varies with use

Delete Tracks and Playlists

1. Click to highlight an item.
2. Drag your selection to to delete.
3. Alternatively, press <Delete> on your keyboard to delete your selection.

TIP
Press and hold <Ctrl> on your keyboard and click to select more than one item.
To select consecutive items, click the first item, press and hold <Shift> on your keyboard, and then click the last item.

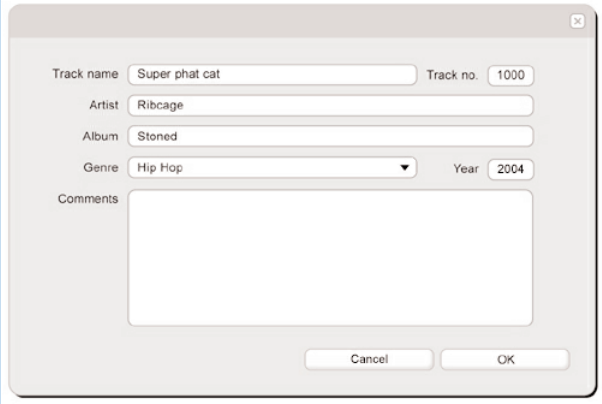

*Actual display varies with use

Edit Track Information

1. Click on a track to edit its information.
2. Click on to call up the **ID3 Tag Editor**.
3. Click on the text boxes of **Track name**, **Track number**, **Artist**, **Album**, **Genre**, **Year**, **Comments** to edit relevant information.
4. Click on **OK** to save the information. Click **Cancel** to discard changes made.

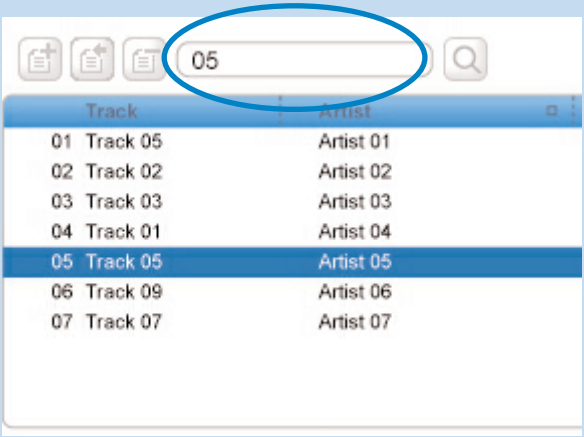

*Actual display varies with use

Search for Tracks

1. Type a search string in the **Search** field.
2. Click on to start searching.
3. You will see tracks that contain the search string.
4. You can transfer, delete or drag and drop these tracks as described in previous sections.
5. Click on the **Selector panel** to exit the search view.

TIP
Deleting items from the searched results will delete them from your library!

DMM Menus and Actions

Use menus to customize DMM:

File	
Refresh contents	For updating the latest status of the selected window
Start player link/ Stop player link	For disconnecting your player from DMM
Quit	For exiting DMM

Edit	
Track information	For editing track information
User and player name	For changing the names of the user and your player

Preferences	
Language	For selecting a language for DMM
Music folders	For adding, deleting or re-arranging your Music folders
Transfer options	For selecting transfer options
Player firmware	For checking, upgrading and restoring player firmware
Upgrade DMM	For checking and upgrading DMM

Help	
DMM Help	For additional help and tips
Support	For instant access to support site
About DMM	For software version information
About Player	For player information

TIP

The menus will call up various messages or windows where you need to input some information. Follow screen instructions to complete your settings.

Make Use of the Different Views

DMM provides different view options. This is to minimize content refreshing time.
There are a few ways to customize DMM views.

① **Section icons**

You can click on or to expand or minimize respective content panels.

② **Border area**

Drag the border area between **MY MUSIC** and **PLAYER MUSIC**. When the content panel is reduced to a certain size, the content panel will only show the section icon.

③ **Drop Zone**

When **PLAYER MUSIC** is minimized, you will see a **Drop Zone**. You can drag selected items and drop them here. Note that the **Drop Zone** icon turns grey when player memory is full.

Display Tracks Your Way

① **Sorting**

You can click on the contents header (Track, Artist, Album, Genre) to arrange music tracks according to the order you selected.

② **Detailed / summary view**

Click on the next to the contents header to turn on / turn off detailed display of item contents.

Upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/support for free upgrades of the latest software nd firmware for your product.

Firmware Upgrade

Your player is controlled by an internal program called **firmware**. You can download and install the latest firmware to keep your player updated.

1. Click **Preferences → Player Firmware → Upgrade Firmware** . This will give you further information on how to download and upgrade your player firmware.

2. Follow screen instructions to complete firmware upgrade.

TIP
Because you are updating the program of your player, please make sure your player is connected to your computer before you launch DMM. Keep it connected during the firmware upgrade process.

DMM Upgrade

DMM is the software that enables best interactions between your player and your computer. Keep it updated by doing upgrades.

1. Click **Preferences → Upgrade DMM**. This will give you further information on how to download and upgrade your DMM.

2. Follow screen instructions to complete DMM upgrade.

Uninstall DMM

1. Close all applications, including DMM.

2. From the **Start** menu, go to **Control Panel**. Select **Add / Remove Programs**. Select DMM from your currently installed programs to uninstall.

3. For further information on uninstalling programs, please refer to Windows' user manual.